




## INSTALLATION OF KA-370 / 380 AND KA-879 ON SLIDING ALUMINIUM OPENINGS

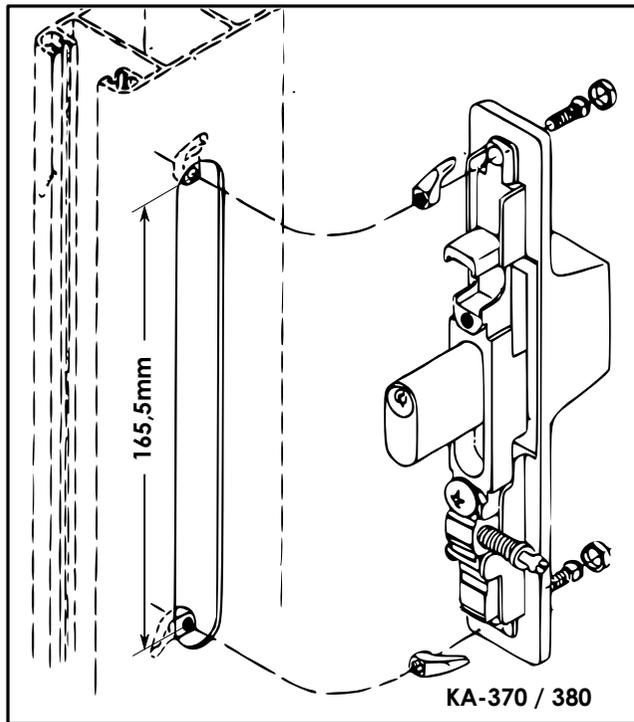


Create a hole, only on the internal face of the profile. Restraint the lock with the especially casted (hooks) components.

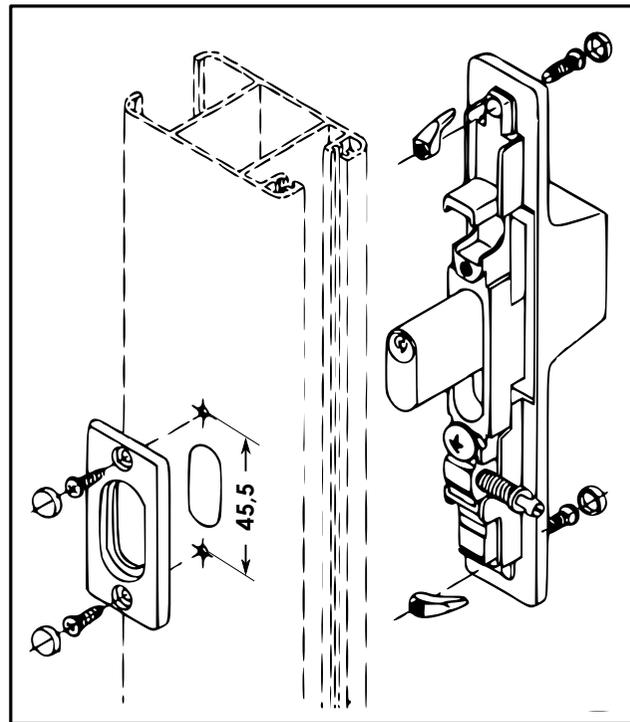

Create a hole on the external face of the profile and fit the locking cylinder rosette.

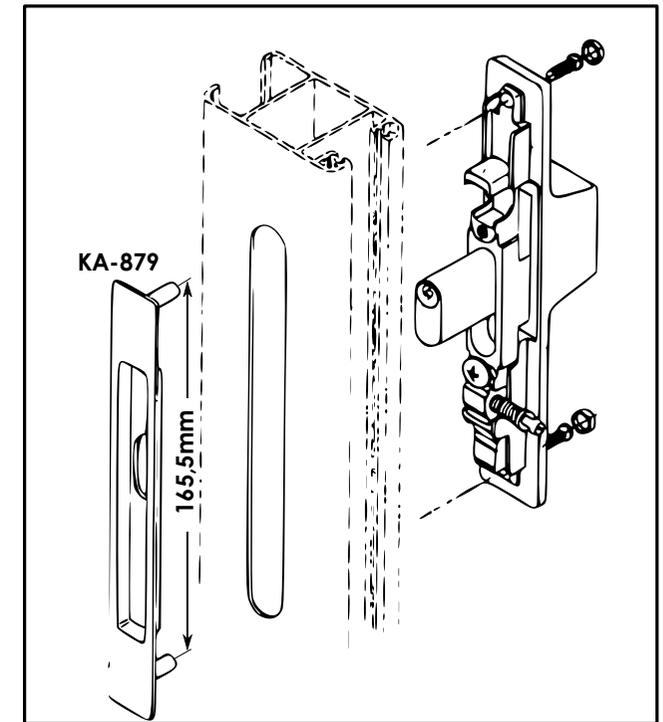

Additionally, you can fit the KA-879 opposite plate of the KA-370 & 380 instead of the locking cylinder rosette or in case you want to replace an old locking handle.

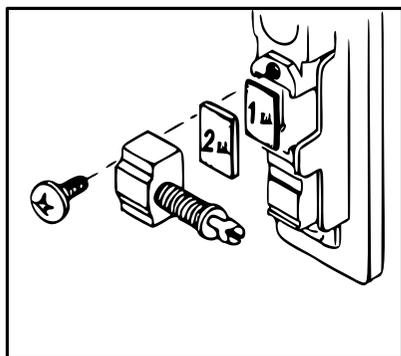

Use the correct spacers 1 & 2 to ensure the correct fit on any profiles depending on their width.